

Stockroom Alarm

STANDALONE ENTRY NOTIFICATION ALARM



ACCESS ALARM WITH SILENT EGRESS

The Standalone Stockroom Alarm (SSA) is an alert system to notify you when people access an area without authorization. This alarm is ideal for areas like retail stockrooms where employees need regular access, but the general public should not access.

The alarm requires PIN authorization on one side of the door (stockroom entry), and allows unrestricted "hands free" passage from the other side of the door (stockroom exit).

Entering a valid PIN temporarily disarms the alarm, allowing passage into the stockroom. Opening the door without entering a PIN will activate the alarm. An alarm will also activate if the door is propped open for an extended period of time.

The stockroom side of the SSA contains a motion sensor that will disarm the alarm when stockroom motion is detected, permitting "hands free" egress.

3840 Herr Road, Sylvania, OH 43560
419-534-6886 www.mwspi.com

Solutions. Designed. Delivered.

**midwest**[™]
SECURITY PRODUCTS

PACKAGE CONTENTS:

1. Alarm Unit	4. Mounting Template
2. Mounting Hardware	5. Setup Guide
3. Door Position Switch	6. Installation Guide

SPECIFICATIONS:

Batteries Required	6 Alkaline C Cell (Not Included)
Battery Life	Approximately 6 Months
Sound Pressure Level	93db
Default Keypad PIN	12345
Disarm Time on Motion	8 Seconds
Disarm on Valid PIN	10 Seconds
Default Alarm Setting	Continuous Alarm Until Valid PIN Entry
Maximum Keypad Supervisors PINs	11
Maximum Number User PINs	89
Low Battery Indicator	Single Beep Once Every Minute
Invalid PIN Lockout	Keypad will shutdown for 5 minutes after 3 unsuccessful tries

DIP SWITCH ALARM SETTINGS:

1	2	3	4	Alarm Function	Alarm Beeps On Power Up or Reset
ON	ON	ON	N/A	Continuous Alarm - Disabled only via keypad	6
ON			N/A	15 Seconds	1
	ON		N/A	30 Seconds	2
		ON	N/A	60 Seconds	3
			N/A	Chirp Mode * * - Short Audible Tone When Door Opens	0

Keypad Programming Instructions

1. Default PIN

The alarm unit comes with a default Supervisor PIN (12345), and no default User PINs. It is recommended that you immediately add a second Supervisor PIN, and remove the default Supervisor PIN. PINs can be 3 to 14 numbers in length.

2. Disarm the SSA

Enter a valid PIN followed by “#”. The alarm will be disabled for 10 seconds.

3. Add a User

- A. Enter a Supervisor PIN followed by “#”.
- B. While the green LED is flashing, press and hold the “#” button until the beeping sound stops, then release the “#” button.
- C. Enter the new PIN followed by “#”.

4. Add a Supervisor

- A. Enter a Supervisor PIN followed by “#”.
- B. While the green LED is flashing, press and hold the “#” button until the beeping sound stops, then release the “#” button.
- C. Press and hold the “#” button again until the beeping sound changes, then release the “#” button.
- D. Enter the new Supervisor PIN, followed by “#”.

5. Delete a User or Supervisor

- A. Enter a Supervisor PIN followed by “#”.
- B. While the green LED is flashing, press and hold the “*” button until the beeping sound stops, then release the “*” button.
- C. Enter the PIN to be deleted, followed by “#”

AS006870 Alarm Module Installation

1	Enter the stockroom, and install 6 C Cell alkaline batteries
2	The SSA should beep 6 times, and then arm after a 15 second delay
3	Press the Reset Button, exit the stockroom closing the door behind you. The SSA should be armed after a 15 second delay.
4	From the store side, enter default Supervisor PIN then #. The door can be opened without alarm, but must be closed within 10 seconds
5	Create "motion" (stockroom side). The Motion LED should blink as long as motion is detected.
6	Exit the stockroom, and close the door behind you. The alarm should not be activated
7	Install sensor cover (stockroom side)
8	After 8 seconds open the door (without entering keypad PIN). The alarm should be activated. Entering the Supervisor PIN and # should deactivate the alarm.